

ShoreStation Wireless Controller



WARNING!

**DO NOT INSTALL
OR USE THIS
PRODUCT BEFORE
YOU FIRST STUDY
OWNER'S MANUAL
AND UNDERSTAND
THE INFORMATION
CONTAINED IN IT.**



Locked key fob indicated by 5 flashing lights when a button is press.



Press both the Up and Down buttons for 3 seconds until the mode 1 light flashes. The key fob is now unlocked.



Press and hold the Up button to run the lift up.



Press and hold the Down button to run the lift down.



Press both the Up and Down buttons for 3 seconds until the mode 1 light turns off. The key fob is now locked.