




Z-Wing Hi-Lift Blade Conversion Kit

02002370

Installation Instructions

1. Before working on machine make sure engine is stopped and the machine has cooled. Remove the ignition key and disconnect the spark plug.
2. Remove existing blade assembly. Retain Blade upper mount plate (02000796), Blade Spacer (02000798), and Blade center connector (01010132) to be used with new Hi-Lift Blade assembly.
3. Remove existing chute baffle (02000381) and discard.
4. Assemble new chute baffle (02002228) as shown in Figure below.
5. Assemble new Hi-Lift Blade assembly as shown in Figure below.
6. Mount new Hi-Lift Blade assembly on your unit using existing Spindle bolt (01005213) and Spindle nut (01000380).

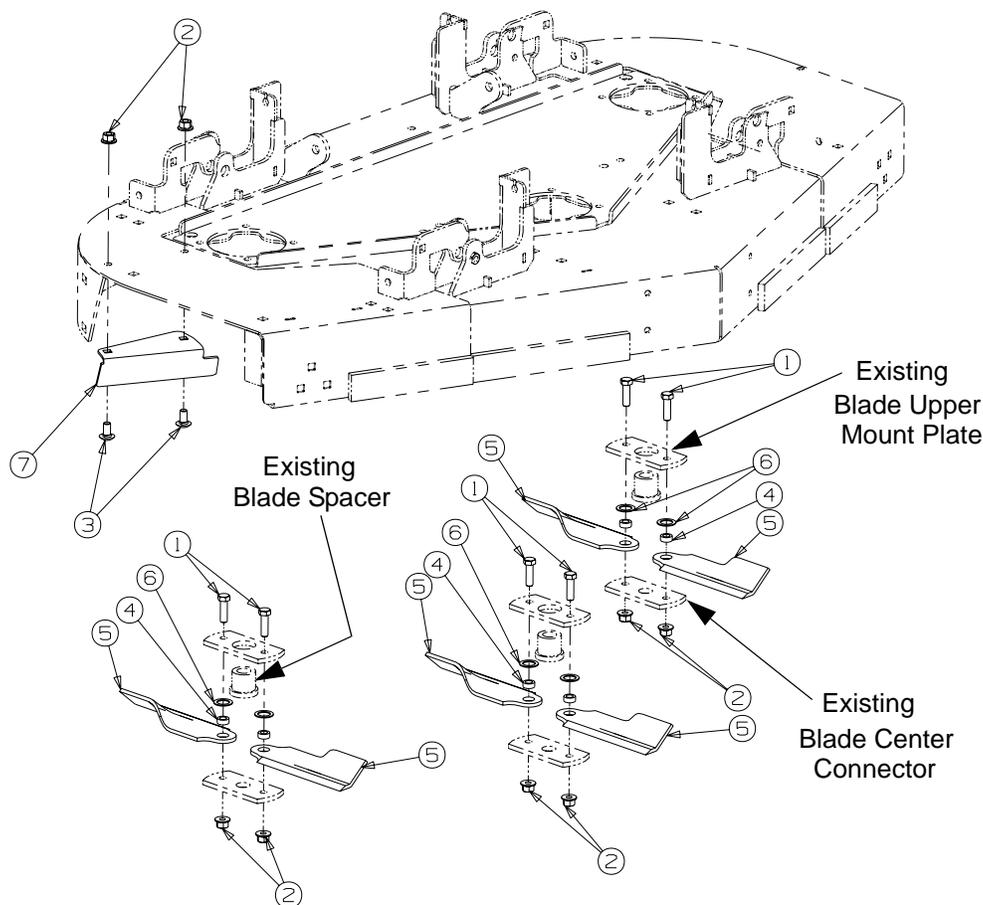

Ref. No.	Part No.	Description	Qty.
1	00011444	Hex Cap Screw, 3/8-16 x 1-1/4	6
2	00022560	Hex Nut, 3/8-16, Lock Flange	8
3	01000372	Carriage Bolt, 3/8-16 x .75	2
4	02000799	Spacer, .385 ID x .625 OD x .25	6
5	02001560	Blade, Hi-Lift	6
6	02001891	Washer, 1.00 OD x .625 ID x .048	6
7	02002228	Chute Baffle	1