

Models: 2135, 2155, 2165, 2185 S/N 326001 and above


Date: May 23, 1996

Subject: Cruise Control Adjustment

With the cruise control lever set in full forward position, the forward control foot pedal will also be locked in a full forward position. If not, the hydro shift links are out of adjustment and following procedure will be required.

1. Hold the forward control foot pedal in a fully forward position and push the cruise control lever also in a full forward position.
2. Hydro shifter front and rear links are adjustable by loosening the hex tap screw located at the center where two links meet (refer to illustration below). With the forward control foot pedal in a fully forward position, lengthen the links so the hydro cruise cam will contact the spacer located on the neutral return bracket.
3. If additional length is needed, remove the hex flange nut and discard 750-0252 spacer. Order and replace with P/N 750-3119 spacer and complete reassembly. After installing, refer to step two for adjustments. This will increase the overall diameter from the original spacer allowing the hydro cruise cam to lock the forward foot pedal in a full forward position.

Warranty Allowance: .5 Hour

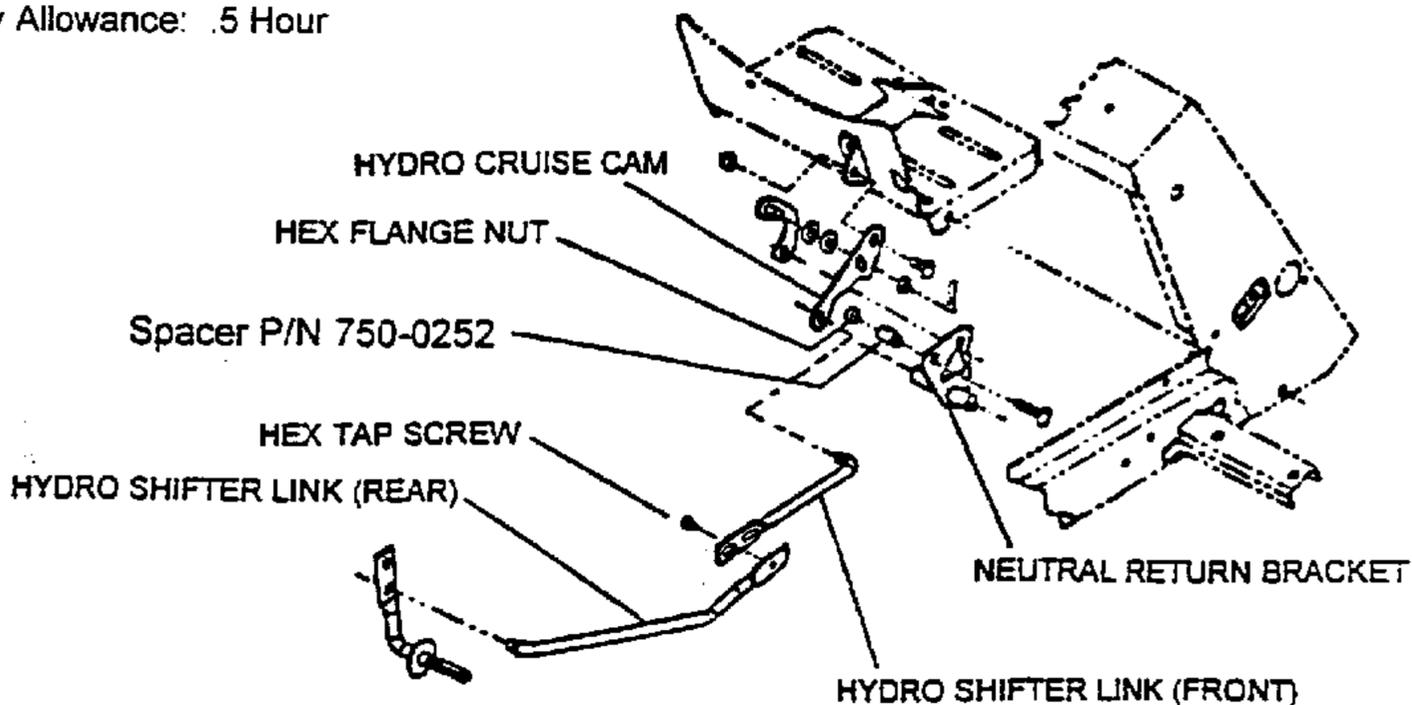

Service Manager	Parts Manager	Service Tech.	Service Tech.	Service Tech.

Circulate And Initial