





Z-Wing Hi-Lift Blade Kit

02002230

Installation Instructions

1. Before working on machine make sure engine is stopped and the machine has cooled. Remove the ignition key and disconnect the spark plug.
2. Remove existing blade assembly. Retain Blade upper mount plate (02000796), Blade Spacer (02000798), and Blade center connector (01010132) to use with new Hi-Lift Blade assembly.
3. Assemble new Hi-Lift Blade assembly as shown in Figure below.
4. Mount new Hi-Lift Blade assembly on your unit using existing Spindle bolt (01005213) and Spindle nut (01000380).

NOTICE: Before installing high-lift blades, the old discharge baffle (P/N 02000381) **MUST** be replaced with a new one (P/N 02002228), or altered to meet the dimensions of the new baffle by cutting it down to the correct dimension. (Fig. #2)

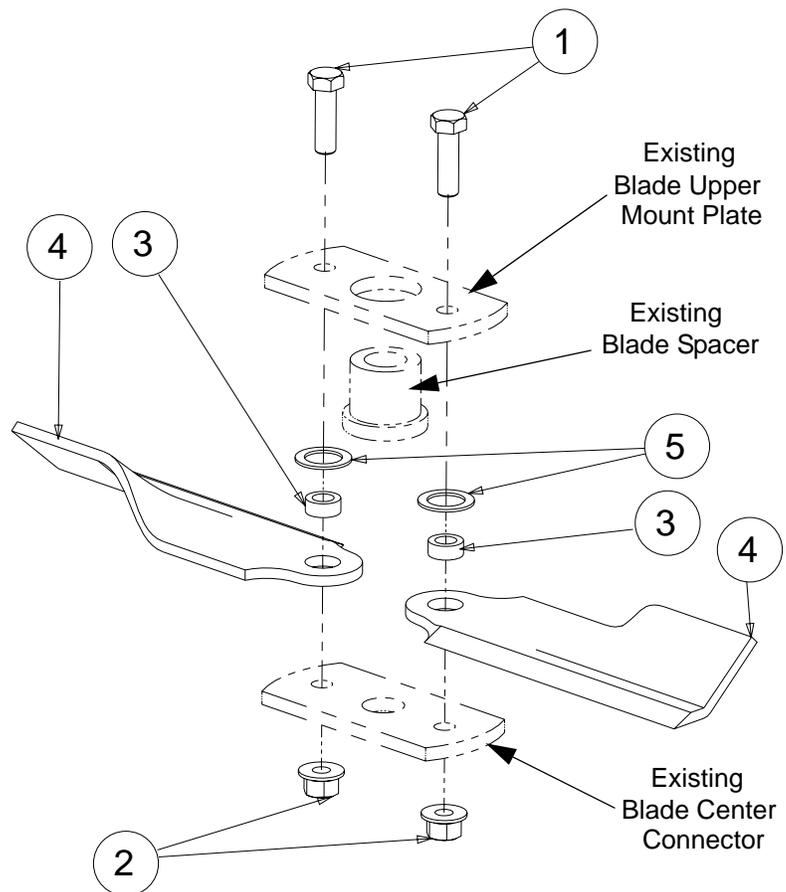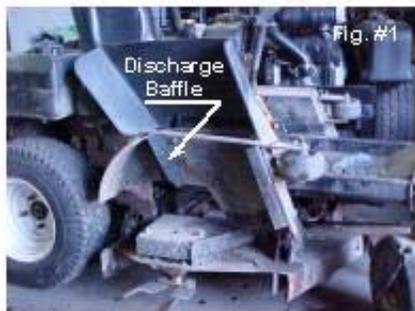

Ref. No.	Part No.	Description	Qty.
1	00011444	Hex Cap Screw, 3/8-16 x 1-1/4	2
2	00022560	Hex Nut, 3/8-16, Lock Flange	2
3	02000799	Spacer, .385 ID x .625 OD x .25	2
4	02001560	Blade, Hi-Lift	2
5	02001891	Washer, 1.00 OD x .625 ID x .048	2

**NOTE: 02002370 High Lift Blade Conversion Kit is also available.
This Kit contains new baffle and blades for all three spindles.**