



OSSP Illustrated Parts List




SELF PROPELLED OVERSEEDER Illustrated Parts List OS901SPHD




OSSP Illustrated Parts List

SLICING REEL ASSY

P/N 351603

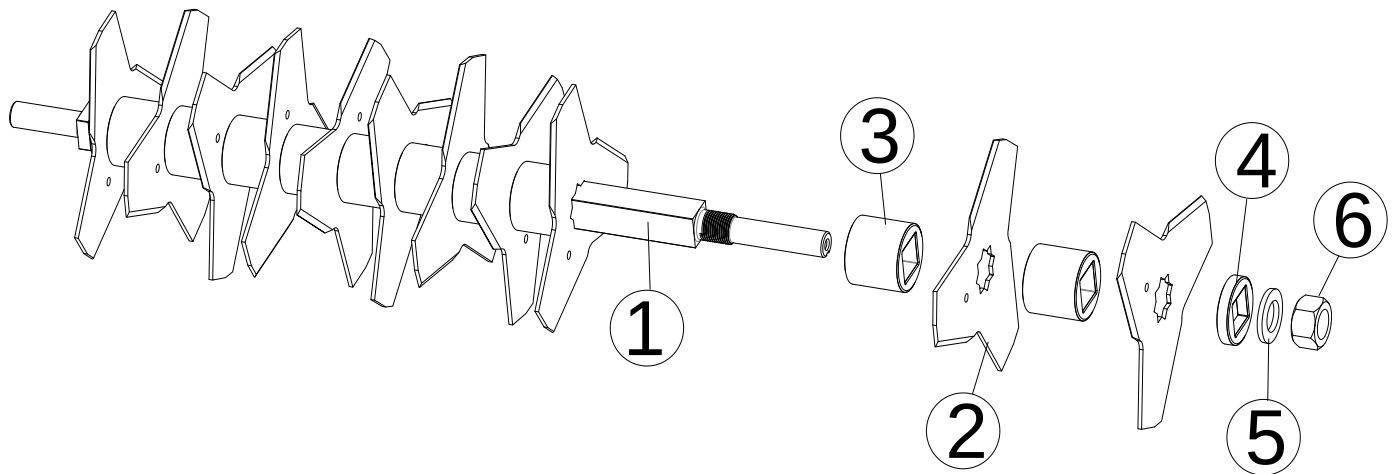

ITEM NO	DESCRIPTION	PART NO.	QTY
1	SHAFT VERTICUTTING REEL OS900SP	351111	1
2	BLADE, VERTICUT LASER CLAD	351290	11
3	SPACER PM REEL OS900SP	351261	10
4	SPACER HARDENED REEL OS900SP	351297	1
5	SPRING DISC 7/8" ID	351298	1
6	NUT 7/8"-14 NC	350341	1

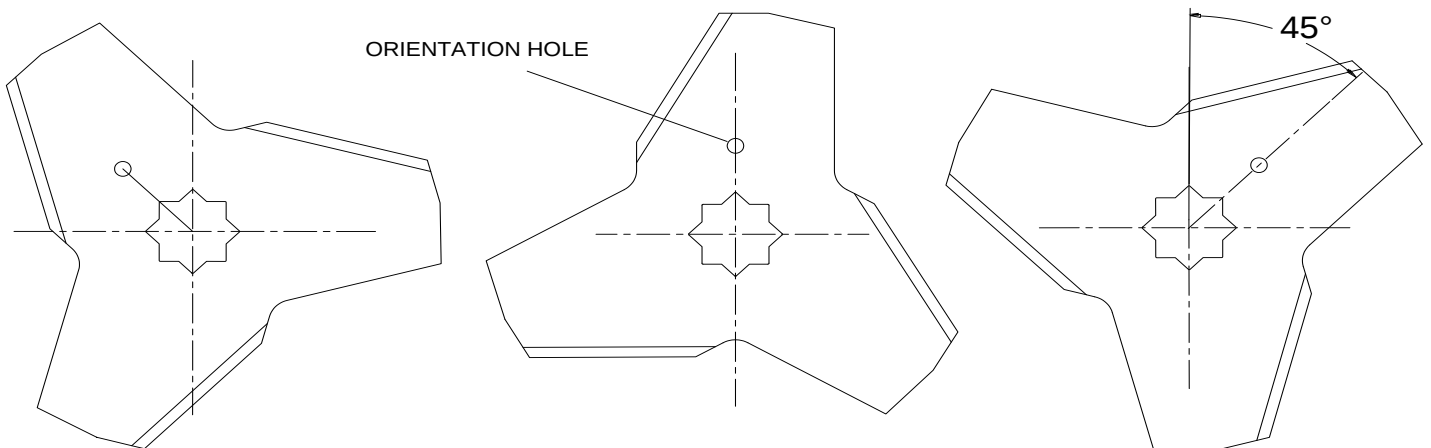


EACH BLADE SHOULD BE ROTATED CLOCKWISE 45 DEGREES. USE THE HOLE IN THE BLADE TO SET ORIENTATION.



OSSP Illustrated Parts List

OSSP ENGINE ASSEMBLY PARTS DRAWING

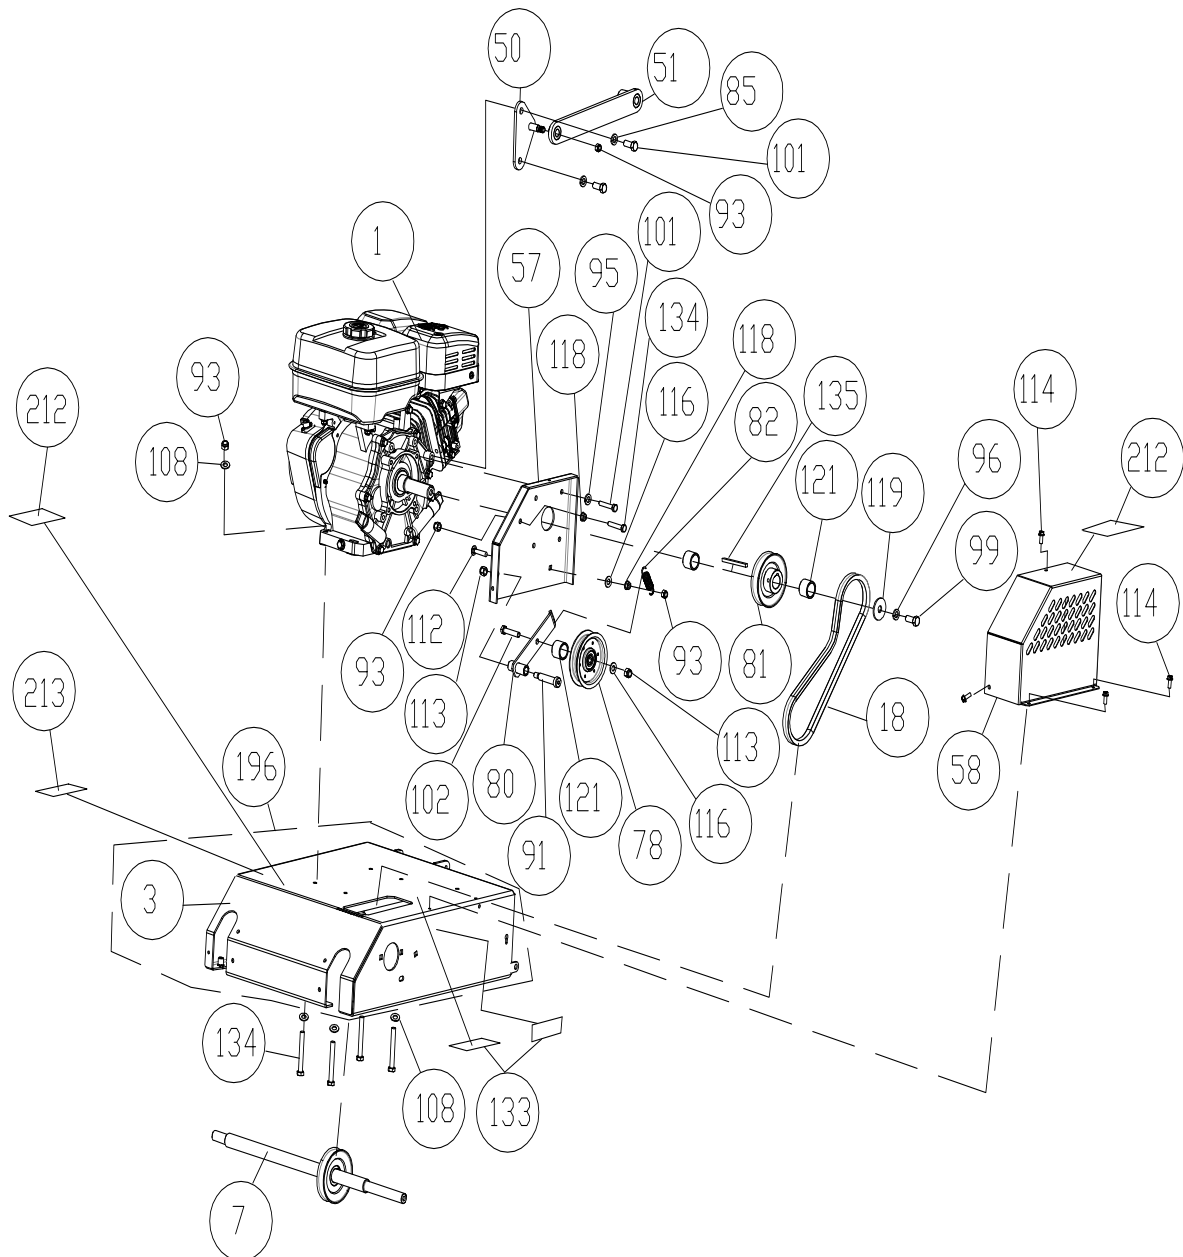



OSSP Illustrated Parts List


OSSP ENGINE ASSEMBLY PARTS LIST

ITEM NO.	DESCRIPTION	OS901SPHD	QTY
		PART NO.	
1	ENGINE HONDA 9HP	430287	1
	ENGINE SUBARU 9HP	-	-
3	ENGINE BASE WA	351125	1
7	JACKSHAFT WA	351107	1
18	BELT GATES #8954-0298	351211	1
50	ENGINE BRACKET WA	351121	1
51	LINKAGE FOOT CONTROL WA	351122	1
57	BRACKET GUARD BELT UPPER	351203	1
58	GUARD BELT UPPER OS900SP	351116	1
78	PULLEY IDLER 4" OD X 3/8 BORE	500113	1
80	ARM IDLER WA UPPER	351113	1
81	PULLEY 3.50" OD X 1.00" BORE	351296	1
82	SPRING IDLER UPPER	351275	1
91	BOLT SHOULDER 1/2" X 2"	520031	1
93	NUT LOCK 5/16"-18	8160002	7
95	WASHER SPLIT LOCK	8177011	6
96	WASHER LOCK 7/16" S/T MED	8177013	1
99	SCREWCAP 7/16"-20 X 1" HCS GR. 8 W/PATCH	510213	1
101	SCREWCAP 5/16"-24 X 1" GR 8 W/PATCH	400164	6
102	SCREWCAP 3/8"-16 X 1 3/4" HCS ZP	8041053	1
108	WASHER 5/16 FLAT	8171003	8
112	BOLT CARRIAGE 5/16"-18 X 1 1/2" ZP	8024042	1
113	LOCK NUT 3/8-16	8160003	2
114	SCREW SELF TAP 1/4"-20 X 5/8" HWH TYPE F	890359	3
116	WASHER 3/8" SAE	8172009	2
118	NUT FLANGE 5/16-18 ZP	350346	2
119	PLATE IMPELLER WASHER PB110	850443	1
121	SPACER 1.25 OD X 1.010 ID X .938 THK	351413	2
133	LABEL DANGER	900327	2
134	SCREWCAP 5/16"-18 X 1 3/4" HCS ZP	8041031	5
135	KEY SQ 1/4" X 1"	9201113	1
196	ENGINE BASE WA OS900SP W/LABELS	351612	1
212	LABEL THD CLEANING FEE 2.00" X 4.00"	501525	2
213	LABEL, HD TOOL RENTAL 2" X 4"	351512	1



OSSP Illustrated Parts List

OSSP REEL/REEL DRIVE ASSEMBLY PARTS DRAWING

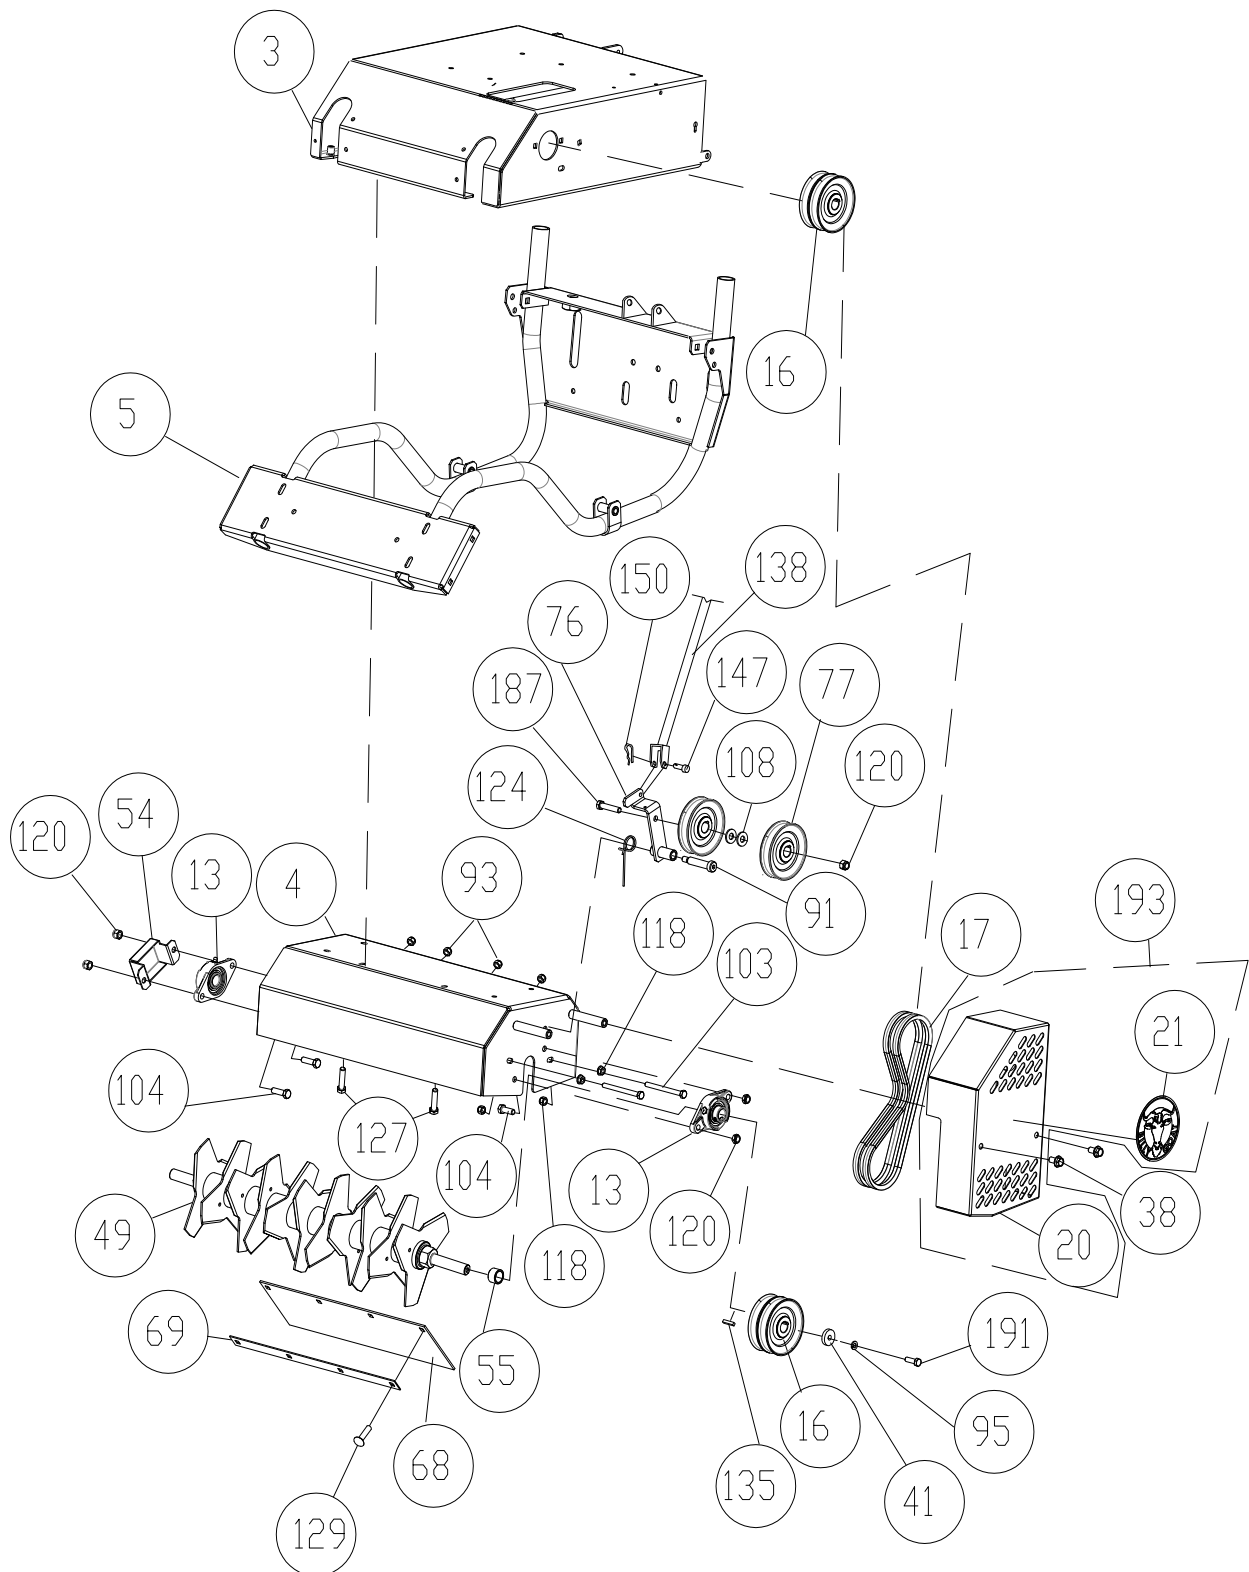



OSSP Illustrated Parts List

OSSP REEL/REEL DRIVE ASSEMBLY PARTS LIST

ITEM NO.	DESCRIPTION	OS901SPHD	QTY
		PART NO.	
3	ENGINE BASE WA	351125	1
4	HOUSING VERTICUTTER WA OS900SP	351101	1
5	FRAME SUPPORT OS900SP WA	351126	1
13	BEARING 3/4" CAST FLANGE W/ZERK	350209	2
16	PULLEY 0.75" ID X 4" 4L SECTION	351210	2
17	BELT 4L	351213	2
20	GUARD REEL BELT OS900SP	351117	1
21	LABEL DECAL SM CIRCLE	890456	1
38	SER HEX WASHER 3/8" - 16	791080	2
41	WASHER 1.125 OD X .344 ID X 10 GA	441150	1
49	REEL ASSY OS900SP	351621	1
54	GUARD BEARING REEL OS900SP	351206	1
55	SPACER SEED BOX AXLE OS900SP	351408	1
68	DEFLECTOR RUBBER OS900SP	351269	1
69	BAR CLAMP DEFLECTOR	351268	1
76	ARM IDLER WA REEL ENGAGE	351112	1
77	PULLEY	350114	2
91	BOLT SHOULDER 1/2" X 2"	520031	1
93	NUT LOCK 5/16"-18	8160002	4
95	WASHER SPLIT LOCK	8177011	1
103	SCREWCAP 5/16-18 X 3 1/2"	8041038	2
104	SCREWCAP 3/8"-16 X 1"	8041050	4
108	WASHER 5/16" FC	8171003	2
118	NUT FLANGE 5/16-18 ZP	350346	4
120	NUT LOCK 3/8-16 LT WT THIN ZP	8161042	5
124	SPRING IDLER MULE DRIVE	351295	1
127	SER HEX WASHER FLNG SCREW 5/16"-18 X 3/4"	351264	6
129	BOLT CARRIAGE 5/16"-18 X 3/4" ZP	8024039	4
135	KEY 3/16" SQ X 1 1/4"	9201080	1
138	CABLE CLUTCH SEEDING CONTROL	351221	1
147	PIN CLEVIS 1/4" X .50"	440124	1
150	PIN CLIP HITCH 0.051" X 3/4"	440193	1
187	SCREWCAP 3/8"-16 X 2 1/2" ZP	8041056	1
191	SCREWCAP 5/16"-24 X 1" GR.8 ZP W/PATCH	400164	1
193	GUARD REEL BELT OS900SP W/LABELS	351607	1



This diagram shows an exploded perspective view of a mechanical assembly. The components are labeled with numbers in circles, indicating their relative positions and assembly sequence. The assembly includes a base structure (5, 29, 31, 32, 33, 34, 35, 50, 51, 52, 53, 56, 70, 72, 93, 102, 107, 110, 113, 114, 115, 117, 128, 129, 136, 137, 138, 140, 141, 142, 144, 194, 200, 201, 202, 204, 205, 206, 208, 209) and various fasteners (screws, bolts, nuts, washers, pins, etc.). The assembly is shown in a disassembled state to illustrate the relationship between the parts.



OSSP Illustrated Parts List


OSSP HANDLE ASSEMBLY PARTS LIST

ITEM NO.	DESCRIPTION	OS901SPHD	QTY
		PART NO.	
5	FRAME SUPPORT OS900SP WA	351126	1
28	PLUG TUBE INSERT 1.25 OD	791056	2
29	HANDLE FOLDING OS900SP	351406	1
30	BUMPER RECESS	360298	1
31	BRACKET CONSOLE OS900SP	351208	1
32	GRIP HANDLE	500267	2
33	PLUG TUBE INSERT 1" OD	890132	2
34	CONTROL MAGURA OS900SP	351209	2
35	LOOP FOLDING HANDLE	351231	2
50	ENGINE BRACKET WA	351121	1
51	LINKAGE FOOT CONTROL WA	351122	1
52	PIN CLEVIS 3/8 X 2.125	520120	2
53	RETAINER 3/8" BOLT PUSH NUT	360279	2
56	LABEL INSTRUCTION OS900SP	351501	1
67	PEDAL SERVICE KIT	351615	1
70	LEVER CLUTCH/SEED DROP	351212	1
72	GRIP LEVER 0.125" X 1" X 5" ORANGE	500379	1
93	NUT LOCK 5/16"-18	8160002	5
102	SCREWCAP 3/8"-16 X 1 3/4" HCS ZP	8041053	2
107	SCREWCAP 3/8"-16 X 3" HCS ZP	8041058	4
110	BOLT CARRIAGE 3/8"-16 X 2" ZP	8024062	2
113	LOCK NUT 3/8-16	8160003	9
114	SCREW SELF TAP 1/4"-20 X 5/8" HWH TYPE F	890359	1
115	WASHER 1/4" SAE	8172007	1
117	LOCK NUT 1/4-20	8160001	1
128	TY WRAP	900407	2
129	BOLT CARRIAGE 5/16"-18 X 3/4" ZP	8024039	2
131	SCREWCAP 1/4"-20 X 1" HCS ZP	8041006	1
136	CABLE SPEED CONTROL RT	351219-S	1
137	CABLE SPEED CONTROL LFT	351271-S	1
138	CABLE CLUTCH SEEDING CONTROL	351221	1
140	LABEL LOGO OS900SP	351500	1
141	BOLT SHOULDER 3/8" X 1 1/4"	360284	1
142	LABEL CLUTCH BLADE	500177	1
144	WASHER 3/8 FC	8171004	12
194	BRACKET CONSOLE OS900SP W/LABELS	351605	1
200	RELEASE PEDAL WA	351124	1
201	SHAFT INNER PIVOT	351421	1
202	PIN COTTER 1/8" X 1" ZP	8197031	2
204	BRACKET PIN CATCH	351321	1
205	BOLT SHOULDER 3/8" DIA X 3.25 LG BLK OX	351316	1
206	SPRING PEDAL RELEASE	351309	1
208	HANDLE W/GRIP RIGHT OSSP SERVICE	351618	1
209	HANDLE W/GRIP LABEL LEFT OSSP SERVICE	351619	1



OSSP Illustrated Parts List

OSSP SEED BOX ASSEMBLY PARTS DRAWING

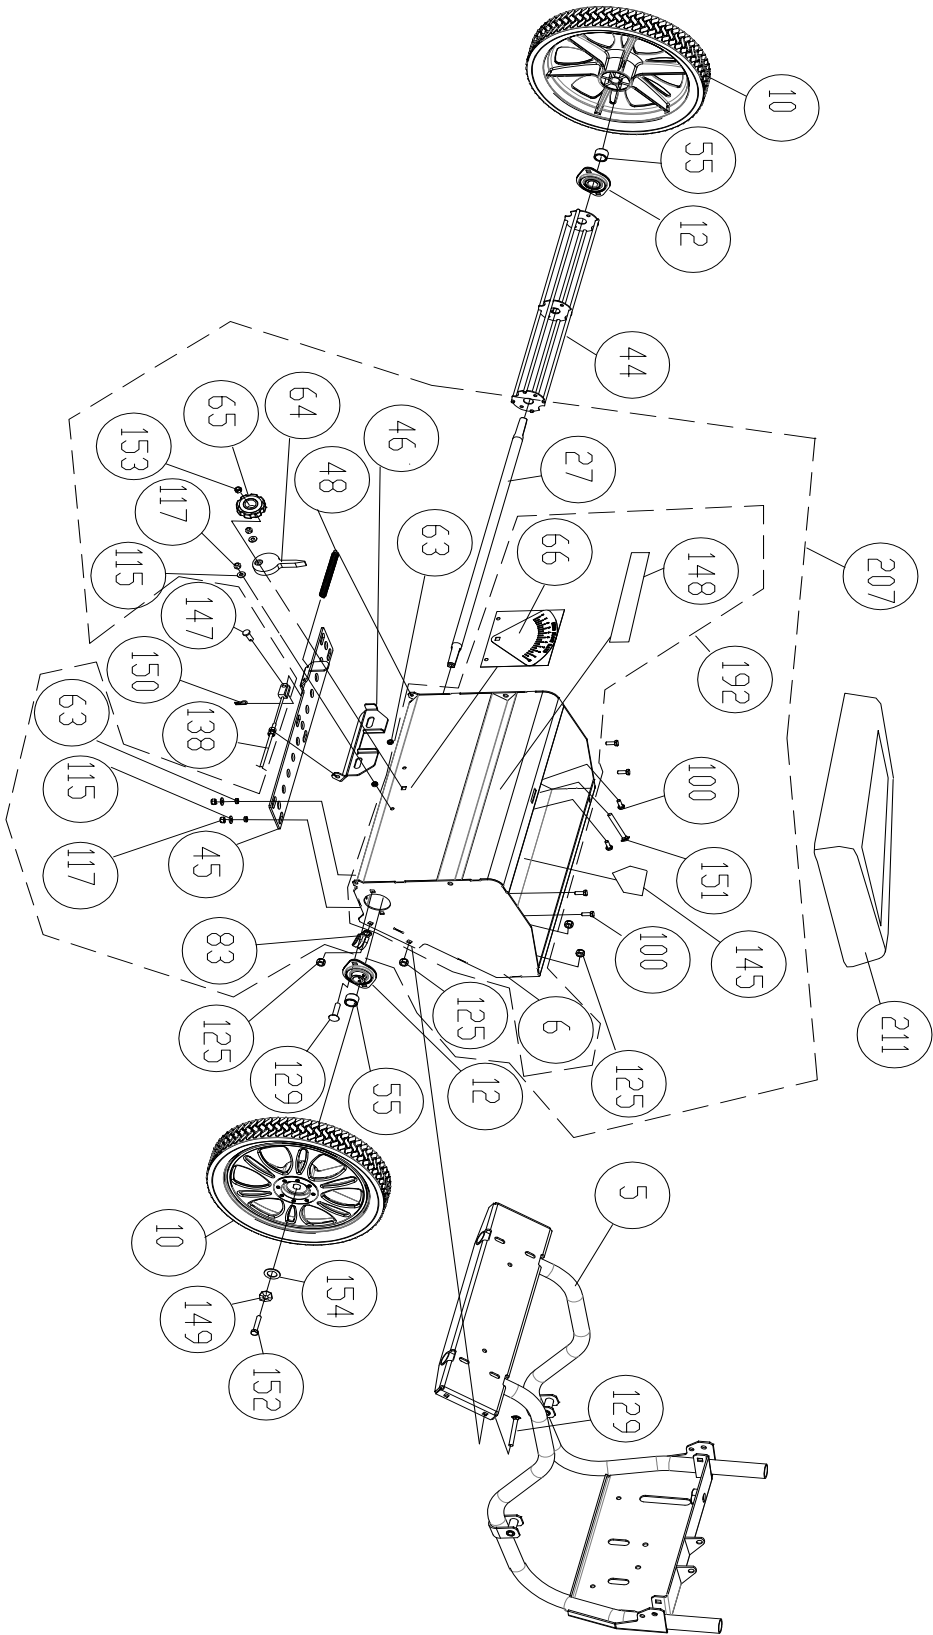



OSSP Illustrated Parts List


OSSP SEED BOX ASSEMBLY PARTS LIST

ITEM NO.	DESCRIPTION	OS901SPHD	QTY
		PART NO.	
5	FRAME SUPPORT OS900SP WA	351126	1
6	SEED BOX WA	351103	1
10	FRONT WHEEL 14" ASSY	351013	2
12	BEARING & FLANGETTE ASSY	850232	4
27	AXLE SEED BOX	351223	1
44	WHEEL PADDLE SEED WA	351105	1
45	PLATE SEED CONTROL OS900SP	351220	1
46	BRACKET CONTROL SEED RATE	351222	1
48	SPRING EXTENSION .5 X 5.00	351303	1
55	SPACER SEED BOX AXLE OS900SP	351408	2
63	SPACER SEED PLATE OS900SP	351253	8
64	DIAL SEED INDICATOR	351265	1
65	KNOB 5/16"-18 X 5/8" FLUTED	400339	1
66	LABEL SEED FLOW RATE	351503	1
83	CLAMP ROUTING FUEL LINE	791070	1
100	SCREW 1/4" - 20 X .75 HWH	8041004	8
115	WASHER 1/4" SAE	8172007	8
117	LOCK NUT 1/4-20	8160001	8
125	NUT 5/16"-18 SER HEX WASHER FLN	350346	8
129	BOLT CARRIAGE 5/16"-18 X 3/4" ZP	8024039	8
138	CABLE CLUTCH SEEDING CONTROL	351221	1
145	LABEL WARNING OPEI	400424	1
147	PIN CLEVIS 1/4" X .61	350399	1
148	LABEL BADGING OS900SP	351505	1
149	WASHER LOCK 5/16" TWISTED TOO	430298	2
150	PIN CLIP HITCH 0.051 X 3/4"	440193	1
151	BOLT CARRIAGE 5/16"-18 X 1 1/4" ZP	8024041	1
152	SCREWCAP 5/16"-18 X 3/4" HCS ZP	8041026	2
153	NUT LOCK 5/16"-18 LT WT TH ZP	8161041	1
154	WASHER FENDER 5/16"	8172020	2
192	SEED BOX WAS OS900SP W/LABELS	351604	1
207	SEED BOX SERVICE KIT	351616	1
211	SEED BOX BONNET	351344	1



OSSP Illustrated Parts List

OSSP TRANSMISSION ASSEMBLY PARTS DRAWING

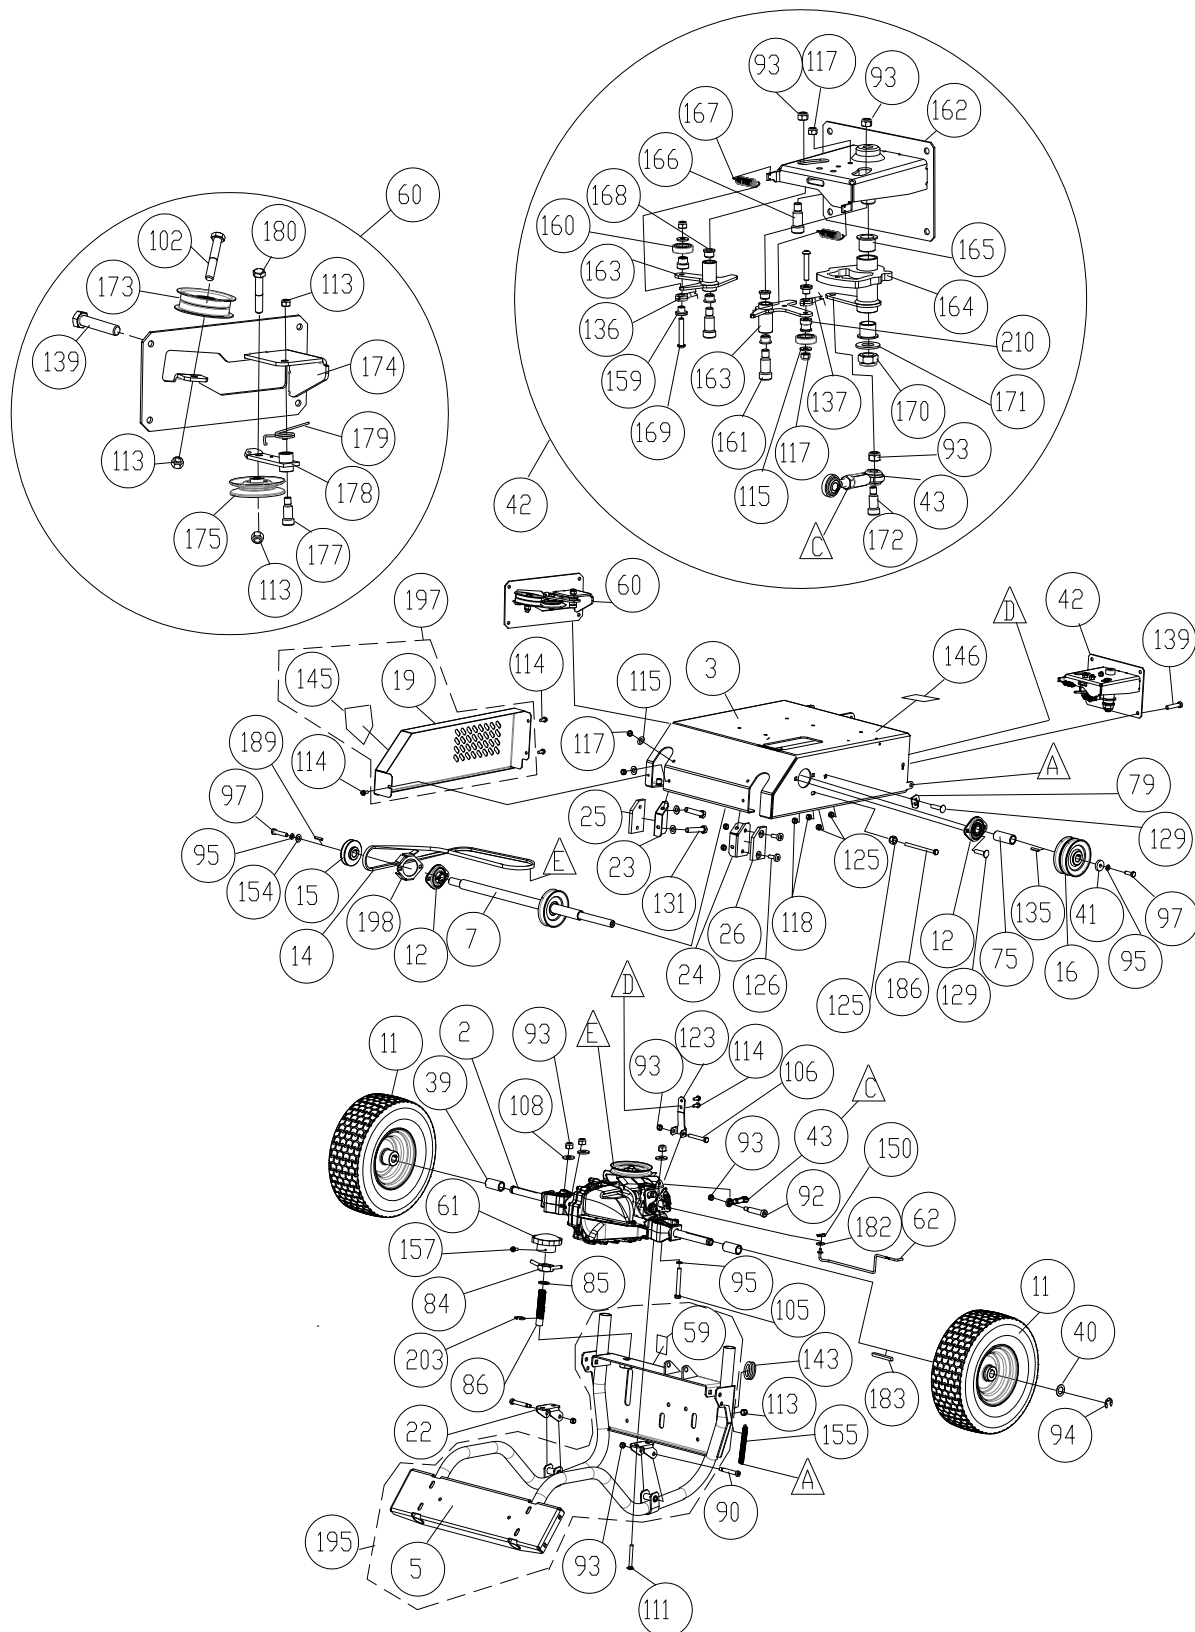



OSSP Illustrated Parts List

OSSP TRANSMISSION ASSEMBLY PARTS LIST

ITEM NO.	DESCRIPTION	OS901SPHD	
		PART NO.	QTY
2	TRANSAXLE	351201	1
3	ENGINE BASE WA	351125	1
5	FRAME SUPPORT OS900SP WA	351126	1
7	JACKSHAFT WA	351107	1
11	REAR WHEEL 13" X 5" PNEU ASSY	351202	2
12	BEARING & FLANGETTE ASSY	850232	4
14	BELT 3L550 TRUFLEX	351327	1
15	PULLEY 0.75" ID X 3.50"	351325	1
16	PULLEY 0.75" ID X 4" 4L SECTION	351210	1
19	GUARD DRIVE BELT OS900SP	351118	1
22	BRACKET FIXED FRONT FRAME	351226	2
23	BRACKET RH WEAR PAD OS900SP	351227	1
24	BRACKET LH WEAR PAD OS900SP	351228	1
25	WEAR PAD RH OS900SP	351229	1
26	WEAR PAD LH OS900SP	351230	1
39	SPACER REAR WHEEL OS900SP	351409	2
40	WASHER .765 ID X 1.25 OD X .06 THK	850238	2
41	WASHER 1.125 OD X .344 ID X 10 GA	441150	1
42	SPEED CONTROL ASSY	351011	1
43	CONNECTOR SPEED CONTROL	351015	1
59	LABEL DEPTH GAUGE OS900SP	351504	1
60	MULE ASSY	351614	1
61	KNOB HAND	850154	1
62	ROD BYPASS ARM TRANSAXLE	351304	1
75	SPACER PULLEY JACKSHAFT	351415	1
79	BRACKET CLUTCH CABLE	351200	1
84	LOCKNUT WA	800227	1
85	WASHER .75"	800109	1
86	ROD HEIGHT ADJUST SCREW	351311	1
90	BOLT SHOULDER 3/8" X 2"	360153	2
92	BOLT SHOULDER 3/8" X 1 1/2"	830528	1
93	NUT LOCK 5/16"-18	8160002	10
94	RING RETAINING EXTERNAL 3/4"	850230	2
95	WASHER SPLIT LOCK	8177011	6
97	SCREWCAP 5/16-24 X 1"	400164	2
102	SCREWCAP 3/8"-16 X 1 3/4" HCS ZP	8041053	1
105	SCREWCAP 5/16"-18 X 3" HCS ZP	8041036	4
106	SCREWCAP 5/16"-18 X 2"	8041032	1
108	WASHER 5/16 FLAT	8171003	4
111	BOLT CARRIAGE 5/16"-18 X 2 3/4" ZP	8024047	4
113	LOCK NUT 3/8-16	8160003	4
114	SCREW SELF TAP 1/4"-20 X 5/8" HWH TYPE F	890359	5
115	WASHER 1/4" SAE	8172007	10
116	WASHER 3/8" SAE	8172009	2
117	LOCK NUT 1/4-20	8160001	6
118	NUT FLANGE 5/16-18 ZP	350346	4



OSSP Illustrated Parts List

OSSP TRANSMISSION ASSEMBLY PARTS LIST

ITEM NO.	DESCRIPTION	OS901SPHD	
		PART NO.	QTY
123	BRACKET TORQUE LIMITING	351294	1
125	NUT 5/16"-18 SER HEX WASHER FLNG ZP	350346	7
126	SCREW SPOT WELD 5/16"-18 X 3/4 W/PROJ	351263	4
129	BOLT CARRIAGE 5/16"-18 X 3/4" ZP	8024039	5
131	SCREWCAP 1/4"-20 X 1" HCS ZP	8041006	4
135	KEY 3/16" SQ X 1 1/4"	9201080	1
136	CABLE SPEED CONTROL RT	351219	1
137	CABLE SPEED CONTROL LFT	351271	1
139	SCREWCAP 5/16" SER HEX WSHR FLNG GR. 5 ZP	351264	8
143	GROMMET 1.25" HOLE	520092	1
146	LABEL DRIVE RELEASE OS900SP	351507	1
150	PIN CLIP HITCH 0.051 X 3/4"	440193	1
153	NUT LOCK 5/16"-18 LT WT TH ZP	8161041	1
154	WASHER FENDER 5/16"	8172020	1
155	SPRING LIFT ASSIST OS900SP	351254	2
157	SCREW MACH #10-24 X 2" HWF ZP	8059143	1
159	SPACER EYELET SPEED CONTROL PM	351348	2
160	BEARING 1/2" ID X 1.125 OD	351257	2
161	BOLT SHOULDER 3/8" X 1 3/4"	351258	2
162	BRACKET SPEED CONTROL WA OS900SP	351108	1
163	BELLCRANK SPEED CONTROL WA OS900SP	351109	2
164	CAM SPEED CONTROL WA	351110	1
165	BUSHING PIVOT FRAME AE	360183	2
166	BOLT SHOULDER 5/16" X 1 1/2"	500340	1
167	SPRING EXTENSION	800242	2
168	BUSHING 3/8" ID X 1/2" OD X 3/8"	840078	4
169	SCREWCAP 1/4-20 X 1 3/4 SKT BUT HD	840199	2
170	NUT LOCK 5/8"-11 LT WT TH ZP	8161046	1
171	WASHER 5/8" SAE	8172013	1
172	SCREWCAP 5/16"-18 X 1" HCS ZP	8041028	2
173	PULLEY IDLER 2.75" OD X 3/8" BORE	350114	1
174	BRACKET DRIVE BELT WA OS900SP	351104	1
175	PULLEY 3V GROOVE IDLER	351216	1
177	BOLT SHOULDER 1/2" X 2"	520031	1
178	ARM IDLER MULE DRIVE WA OS900SP	351120	1
179	SPRING IDLER MULE DRIVE OS900SP	351302	1
180	SCREWCAP 3/8"-16 X 1 1/2" HCS ZP	8041052	1
182	WASHER #10 SAE	8172005	1
183	KEY 3/16" SQ X 2 1/8"	9201087	2
186	SCREWCAP 5/16"-18 X 5" HCS ZP	8041042	1
189	KEY 3/16" SQ X 5/8"	9201072	1
195	FRAME SUPPORT OS900SP WA W/LABELS	351613	1
197	DRIVE BELT GUARD WA W/LABELS	351609	1
198	BRACKET BELT GUIDE OS900SP	351326	1
203	RING SNAP TRUARC	850233	1
210	SPACER STEPPED SPEED CONTROL PM	351347	2